

KESSLER MULTI-ANGLE MOUNTING PLATE GUIDE



The Kessler Multi-Angle Mounting Plate is designed to work in conjunction with the Kessler Low Profile Ball Head. The mounting plate can be attached in a 45° or 90° configuration and, coupled with the range of movement of the Low Profile Ball Head, will allow for configuring your camera at just about any angle you desire. The ability to mount to the Low Profile Ball Head in a 90° configuration is ideal for doing vertical slider moves. With the optional Multi-Angle Cheese Plate, you can also attach various accessories and mounts; even another Multi-Angle Mount.

45° AND 90° CONFIGURATIONS

1. The Multi-Angle plate comes in two (2) pieces with two (2) thumb screws. It can be assembled in a 45 degree or 90 degree configuration.
2. For a 45 degree configuration, mount the camera plate to the 45 degree side of the base plate.
3. Use the 45 degree angle when shooting with a slider in an angled position. This will allow you to compensate for the angle and keep the camera level.
4. For a 90 degree configuration, mount the camera plate to the 90 degree face opposite to the 45 degree face on the base plate.
5. The 90 degree position is used when shooting with a slider in totally vertical mode or when you need to switch from landscape to portrait orientation.

NOTE: We highly recommend the Kessler Low Profile Ball Head as it purpose designed to support the Multi-Angle Plate while allowing for quick adjustments. Technically the plate can be mounted to any 3/8" stud if you have special requirements.



LOCKING PIN USAGE

When attaching the Multi-Angle Plate to the Kessler Low Profile Ball Head, a locking pin is utilized to prevent the plate from spinning.


1. Locate the included grub screw and thread it into the hole on the bottom of the Multi-Angle Plate with the included hex key. Do not over tighten.
2. Lower the plate over the Low Profile Head aligning the locking pin with any of the three (3) screw heads in the top of the ball head.
3. Tighten the top thumb wheel on the Multi-Angle Plate to lock in place.



DIRECT MOUNT CAMERA PLATE

The camera plate portion of the Multi-Angle Plate can be direct mounted to the Low Profile Ball head for level shots on a slider.

1. Remove the camera plate from the Multi-Angle base plate.
2. Remove the three (3) socket cap screws with the included hex wrench and set the Low Profile Ball head round plate aside.
3. Align the round inset on the bottom of the camera plate to the top of the Low Profile Ball head.
4. Align the three (3) screw holes and re-insert the socket head cap screws removed in step 2.

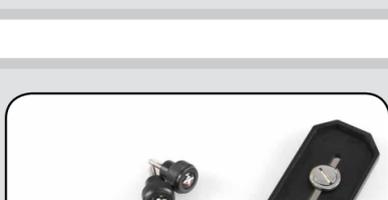

OPTIONAL CHEESE PLATE

The Kessler M-A Cheese Plate can be used with the Multi-Angle Plate to attach accessories like monitors, mics, lights, etc. You can even mount another Multi-Angle Mount for specialized camera configurations.

1. The Cheese Plate attaches to the Multi Angle plate with the two included thumb screws.
2. Mounting position can be selected to best suite your needs.

