
CineDrive® Turntable Conversion Kit Installation Guide

by **Kessler**

What's Included


- a. (1) Turntable Degree Wheel with Sticker
- b. (4) Turntable Plate Mounting Screws 1/4"-20 x .75" Socket Countersunk Screw
- c. (1) Degree Indicator with 5/16" x 3/4" Stainless Dowel Pin
- d. (1) Degree Indicator Mounting Screw 1/4"-20 x .75" SHCS
- e. (1) Turntable Base
- f. (4) Turntable Base/Hub Mounting Screws 1/4"-20 x 1.75" SHCS
- g. (1) 5/32" Allen Wrench
- h. (1) 3/16" Allen Wrench

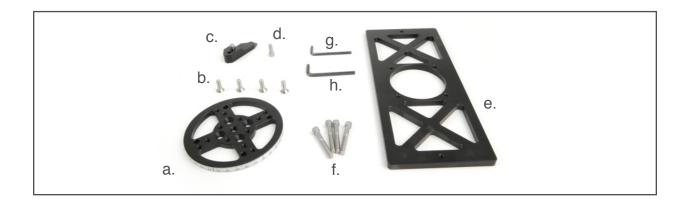

Pan Brick Removal and Preparation for Turntable Kit Installation:

Step 1


Remove the three 1/4"-20x.75 flat head allen screws joining the pan brick and tilt bricks using a 5/32" hex allen wrench. Retain screws for possible future use.

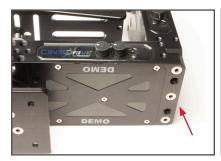





Step 2Remove the four Turntable Plate Mounting Screws holding the pan brick mounting plate to the pan hub. Retain screws and mounting plate for possible future use.

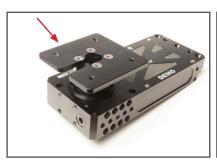





CineDrive Turntable Kit Installation:


Step 1Install supplied Turntable Base to the pan brick as shown using four Turntable Base/Hub Mounting Screws.







Step 2
Mount supplied Turntable Degree Wheel to pan brick hub (where original pan mounting plate was removed in step 2 above) using four Turntable Plate Mounting Screws.
Position of Degree Wheel and zero degrees mark does not matter when installing Degree Wheel to hub.

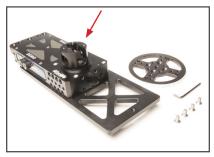





Step 3Install supplied Turntable Degree Indicator to pan brick in the location shown using one Degree Indicator Mounting Screw.








Optional Outrigger Feet Installation:


Step 1Install any optional Outrigger Feet by screwing to ends of turntable mounting base.

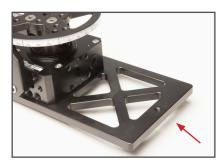



Optional Corian® Table Top Installation:

Step 2
Install optional accessory Corian® Table Top to turntable dial wheel using four supplied

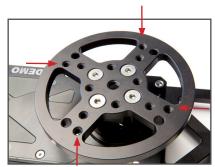





Optional Mounting Hub Installation:

Step 1Remove the top Degree Wheel from the Turntable with the supplied 5/32" allen wrench







Step 2
(If Turntable Base is installed, remove before installing Mounting Hub.)
Line up the Mounting Hub with the bottom of the Turntable brick. Use the supplied
Turntable Base/Hub Mounting Screws and 3/16" allen key to bolt the Hub to the brick.





Step 3Re-install the top Degree Wheel.



