


HD ANGLE PLATE

by *Kessler*



Mounting a Camera

1. Use the included 1/4"-20 and/or 3/8"-16 camera screws to mount your camera to the top of the plate.
2. Tighten with the included 5/32" allen wrench.

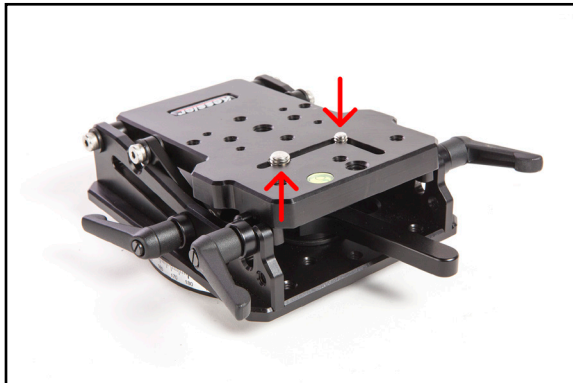


Mounting a Slider

1. Loosen the 4 indexing levers and tilt the platform to reveal the 6 pass-through holes for mounting.
2. Unlock the swivel lock and rotate the base to until you can see all 6 counter-sunk holes through the 6 pass-through holes.

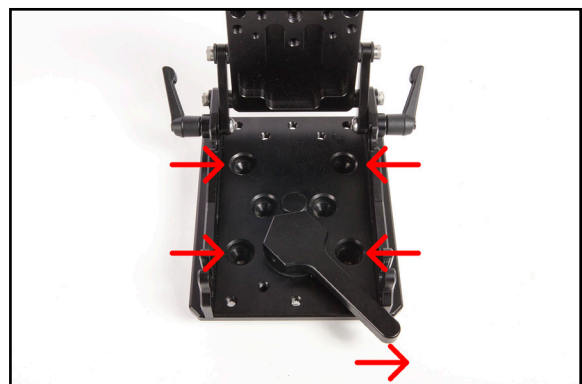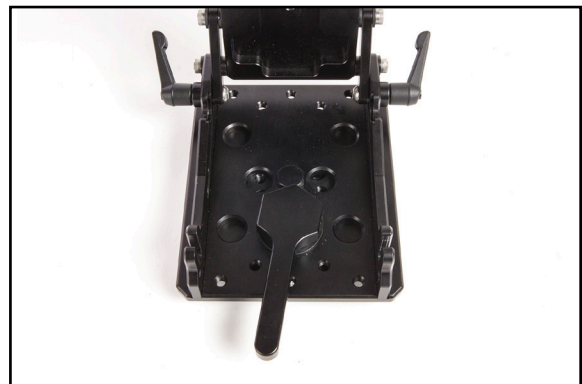


Mounting a Slider

3. Line up the 4 holes (shown below) with the 4 holes on the slider cart.

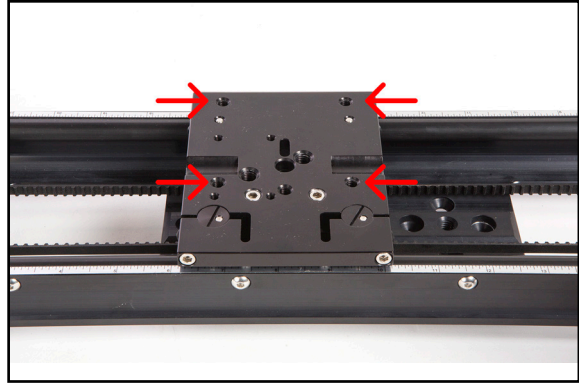


4. Use the included (4) 1/4"-20 countersunk screws and 5/32" allen wrench to mount the HD Angle Plate to the slider cart.

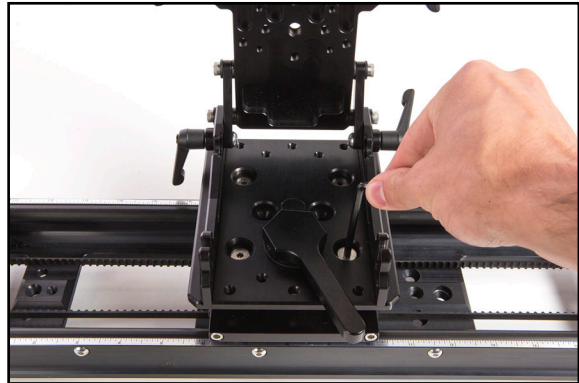

Low Angle Locking Levers

1. If in a low angle, tighten the front levers (shown) as well as the rear levers for the best performance.

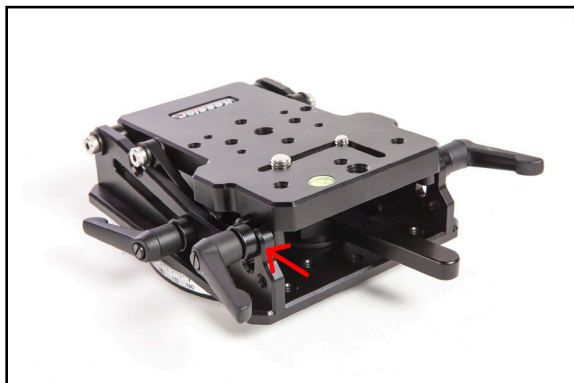

Indexing Levers

1. To reposition the levers, pull out/away from the base of the knob and spin in either direction. You are now able to tighten or loosen the knob without interference. Repeat if necessary.

