

PARALLAX™ INSTALLATION GUIDE

by *Kessler*

What You'll Need

- Slider (*Note* 1st generation CineSliders are not compatible - contact support*)
- Rail stop accessory (Fig. A)
- Parallax rail assembly (Fig. B)
- 5/32" allen key (Fig. C)
- (2) 1/4"-20 custom countersunk screws (Fig. D)
- (2) 1/4"-20 countersunk screws (Fig. E)
- Parallax cart assembly (Fig. F)

Step 1

Snap rail stop accessory onto slider rail flush with end block on drag end




Step 2

Place Parallax rail underneath camera slider and line up to corresponding screw holes




Step 3

Use 2 included 1/4"-20 custom countersunk screws to secure Parallax rail to slider channels using larger (3/8"-16) screw holes with included 5/32" allen key

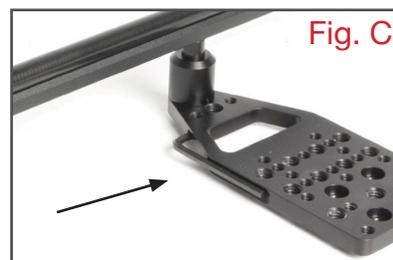


Step 4

Secure Parallax rail to slider center mount using included 1/4"-20 countersunk screws

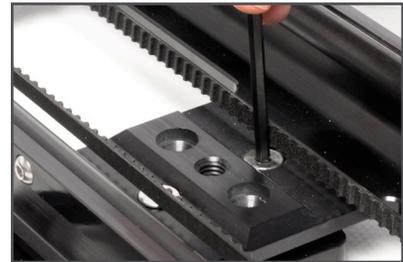

Step 5

Loosen rail knobs and angle Parallax rail away from drag end of the slider

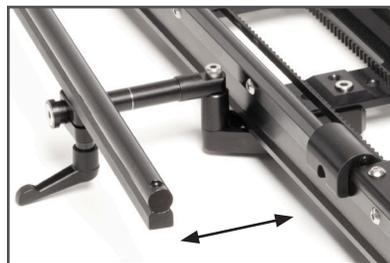

Step 6

Collapse Parallax cart towards bearing assembly and slide Parallax bearing assembly over the Parallax rail from the slider's drag end



Step 7

Align bottom 3/8" stud of Parallax cart with hole on slider carriage as shown

