

KC-8 Support Cables

ASSEMBLY INSTRUCTIONS

STEP 1

Slide the first cable support over the aligned frame. Use a 1/4"-20 bolt and nut to secure it but do not tighten.




STEP 1A

If you have purchased the optional Tool Less Kit, slide the first cable support over the aligned frame. Use a 1 1/2" threaded knob to secure it. Place the female threaded knob on the inside of the frame. Leave the knobs loosened.

STEP 2

To attach the support cables, begin by inserting an eyebolt into the base section opposite the handle.



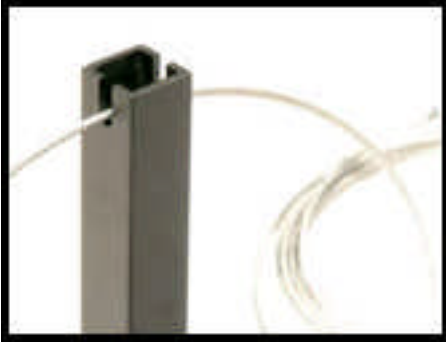


STEP 3

Place the eyebolt that is attached to the cable in the other-hole then thread the cable over the first support.

STEP 4

Place the next two eyebolts into the holes in the tip section.

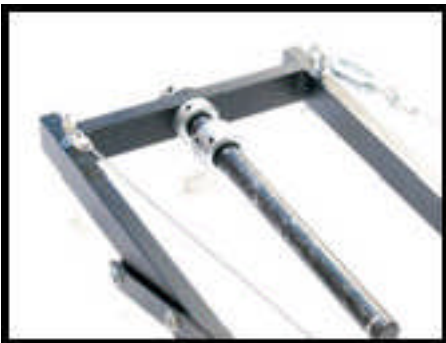

STEP 5

Thread the cable through the last support and hook into the last eyebolt. Tighten the turnbuckle to remove slack.