
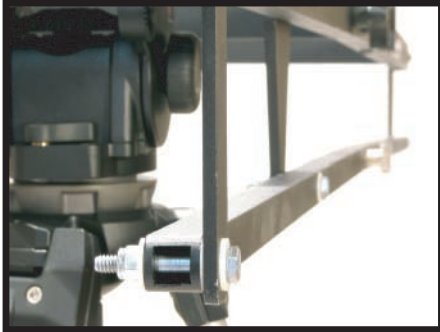


Ultra Duty Control Rod

INSTALLATION INSTRUCTIONS

STEP 1

To upgrade your existing t-bar control rods to the square bar, simply examine your existing configuration, identify the similar hole pattern and line up the ultra duty control rods next to your crane.

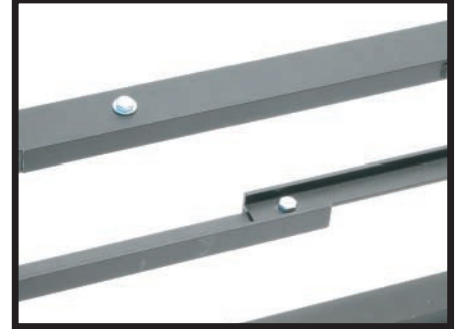

STEP 2

After removing the bolts from the t-bar, replace that section with the square bar and reinsert the bolts. When tightening bolts at pivot points be sure to tighten until snug then back off until pivot point moves smoothly with slight resistance. There should be no slop.

