


VERTICAL BRAKE INSTALLATION INSTRUCTIONS

STEP 1

Place the bolt with the lock washer on the inside of the tripod mounting bracket.

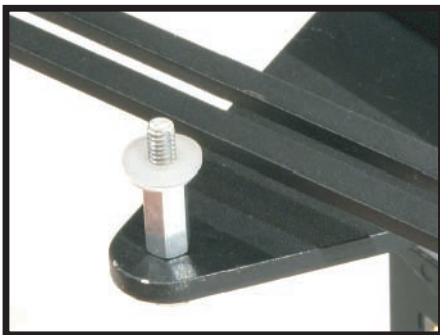


STEP 2

Tighten with silver spacer-nut. Then place a silver washer onto the spacer-nut then the nylon washer.

STEP 3

Place the 3/8" bolt through the braking mechanism on the opposite end with a nylon washer on either side.

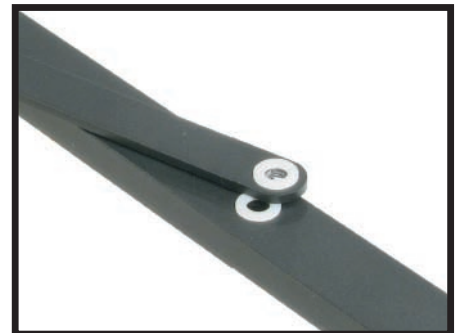

STEP 4

Place a 3rd nylon washer over the end of the bolt. Secure with a nut and tighten. The bolt should still turn by hand with medium resistance.

STEP 5

Place the other end of the braking mechanism over the bolt with the silver spacer-nut. Secure loosely with the threaded knob. When loosened there is free range of motion. To stabilize, tighten the threaded knob.

