



# 100mm Ball Mount for CineDrive Pan & Tilt Head



Use this 100mm Ball Mount to connect the CineDrive Pan and Tilt Head to any 100mm or 75mm bowl.





\*With its 100mm levelable ball, it can be mounted to any 100mm bowl.

\*With its 75mm fixed ring mount, it can be mounted to any 75mm bowl, however you will not be able to level.



## INSTALLATION

- Locate the mounting base of the CineDrive Pan and Tilt Head.
- You will see (4) 1/4"-20 countersunk screws.
- With a 5/32" allen key, remove the (4) screws from the base of the head.

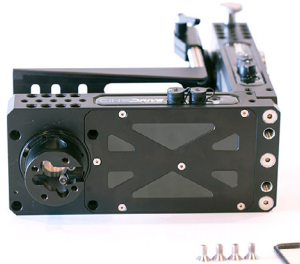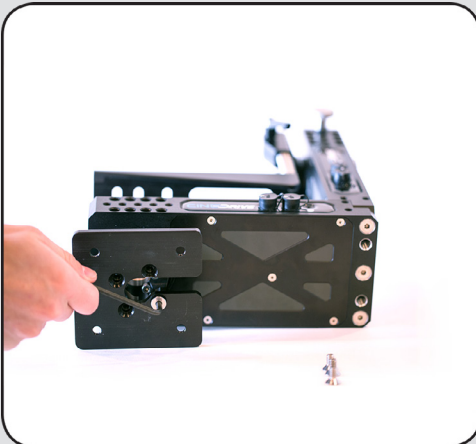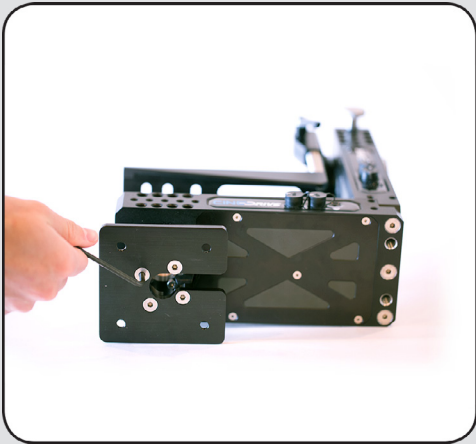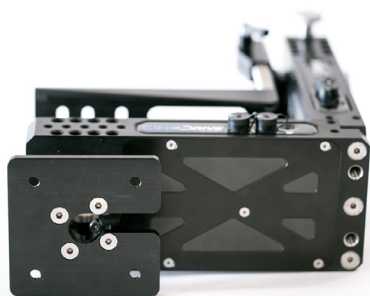

- Once removed, place the ball mount on the circular base of the head.
- Note, the base should fit inside the ridge of the ball mount.
- With the ball mount seated properly against the base, line up the 4 holes with the holes in the base.
- Finally, screw in the (4) 1/4"-20 countersunk screws that were removed earlier.

