


WEIGHT BAR

INSTALLATION INSTRUCTIONS

STEP 1

Remove the plastics encaps from the crane.

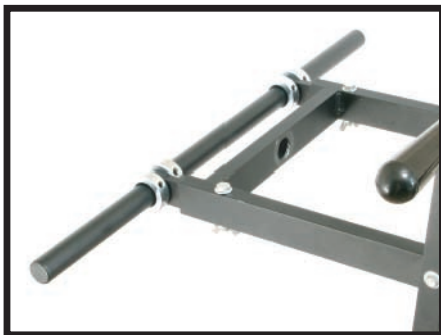

STEP 2

Insert rails into frame and secure with bolts. Use the colars to lock the bar in place.

STEP 2B

If you are installing the weight bar onto a 12ft crane, simply use the eyebolts that were provided as part of the support system for that model.



STEP 3

Apply the appropriate weights (not included) onto the bar and secure with colars. Pictured is the weight bar configured in the extended position.

STEP 4

Use the factory weight bar and a weight as a method of fine tuning the balance of the crane. Simply move the weight forward and back until perfect balance is achieved.

